 
 



How to set up your Marmot Limelight 2P/3P

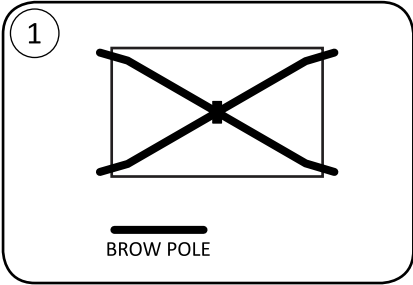


CONNECT POLES LEAVING NO SPACE BETWEEN SECTIONS AND LAY ON TENT BODY

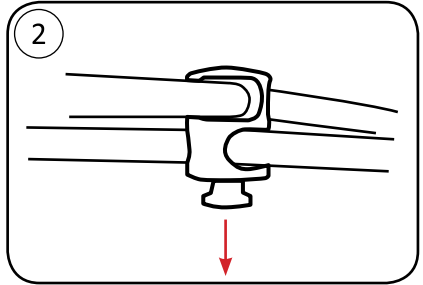

 
SMALL END OF HUB MUST POINT DOWN

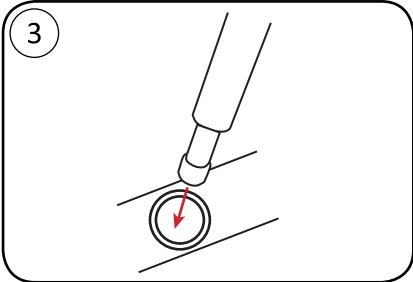


INSERT POLE TIPS INTO CORNER GROMMETS

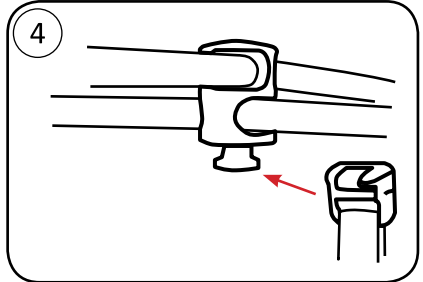 


CONNECT CENTER CLIP TO HUB

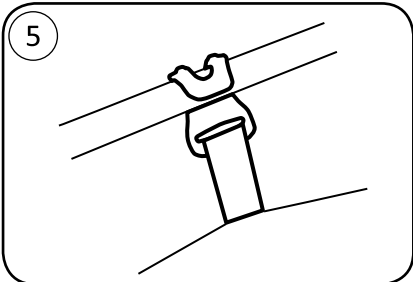 

 
CONNECT CLIPS - MATCH WEBBING COLOR TO POLE COLOR

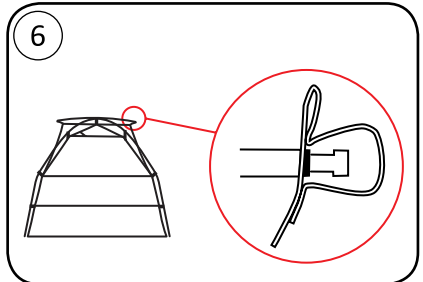

 
PLACE BROW POLE ON TOP OF "X" POLES AND INSERT INTO GROMMETS

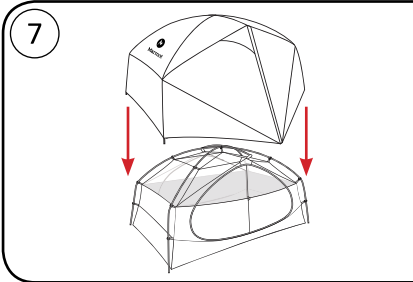


PULL RAINFLY OVER BODY

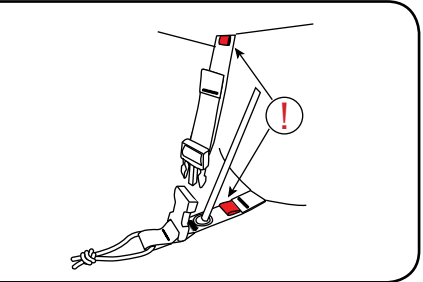 

 NOTE RED TABS ON FRONT CORNERS
CONNECT BUCKLES AND PULL TO TIGHTEN

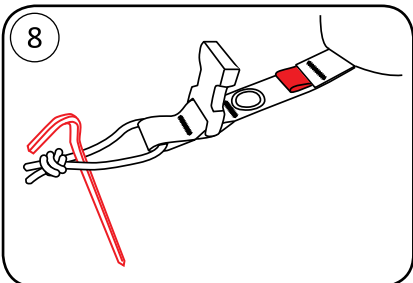


STAKE OUT CORNERS

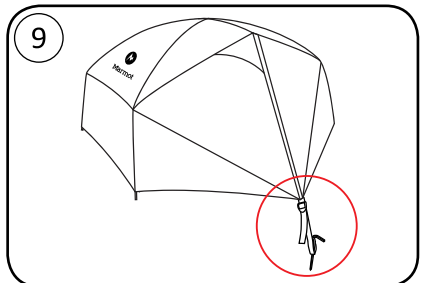 


STAKE OUT VESTIBULES

 OPTIONAL

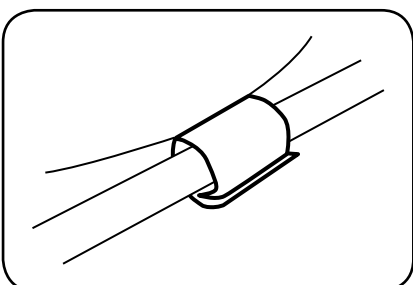

LOOK UNDER FLY - VELCRO FLY TO POLES

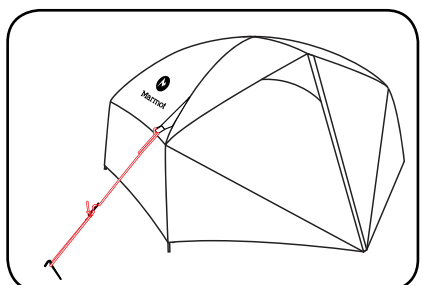 

GUY OUT IN HIGH WIND

ADDITIONAL USEFUL TENT INFORMATION

- All Marmot Tents come with a **Pole Repair Splint**. The hollow, 4-5" Pole Repair Splint can temporarily repair a broken tent pole. Place the splint over the broken pole section. If you believe the broken pole is a warranty issue, please contact Marmot Warranty Department.
- An optional **Footprint** helps protect your tent from twigs, rocks and other debris found on the ground. The footprint is placed under the tent body and is staked out with the body at the stake out points. When using a footprint, place under the tent body with the coated side facing up.
- Take into consideration the direction of the wind before you pitch your tent. Set up your tent so that the narrowest side of the tent faces the wind.
- In high-wind conditions utilize the **Guy-Line Tabs and Cord** to anchor the tent. Attach the cord to the reflective guy-line tabs making sure the guy-lines are taut and secured to a tent stake or other object that will hold in high-wind conditions.
- For the most secure set-up, insert the tent stakes into the ground at a 45-degree angle with the tip/bottom of the stake pointing toward the tent.
- Extended **Exposure to Sunlight** can damage your tent. If possible, avoid leaving your tent pitched in direct sunlight for an extended period of time.
- Never pitch your tent near a **Heat Source or Campfire**. Take into consideration the direction of the wind, and pitch your tent upwind from a campfire to avoid dangerous embers. Do not use an open flame in or around your tent. **Do Not Cook or Use a Heat Source** in the tent or vestibule.
- Always **Clean and Dry** your tent before storage. A wet, dirty or damp tent can lead to mildew damage. **Tent Zippers should be Cleaned** to help reduce coil and slider wear and damage.

CLEANING, CARE and STORAGE

- If necessary, use a sponge and warm water to clean your tent. If the entire tent requires cleaning, wash in a large tub or bathtub of cold water, but do not soak the tent for an extended period of time. Do not use hot water, bleach, dishwashing soap or detergent to wash the tent. If needed, a mild, non-detergent based soap can be used to clean the tent.
- Do not use a washing machine or dryer to clean the tent could damage waterproof coating. To dry the tent, either pitch it in the shade, or hang it on a line to dry. Be sure the tent is completely dry before storing it.
- Always store your tent in a cool dry place. Keeping your tent in a hot car, for example, can damage the tent.



For additional information about your Marmot® tent please visit www.marmot.com.